

syslog-ng Store Box 3 LTS Packaging Checklist

May 12, 2015





Table of Contents

1. Preface	3
2. Preparing syslog-ng Store Box for delivery	4
Appendix A. syslog-ng Store Box Hardware Installation Guide	5
A.1. Installing the SSB hardware	5
A.2. Installing two SSB units in HA mode	7
A.3. Installing a SAN storage module to SSB	7
A.4. Hardware Troubleshooting	8
A.5. Hardware specifications	8
Appendix B. syslog-ng Store Box Software Installation Guide	9
B.1. Installing the SSB software	9



1. Preface

This guide provides a detailed description on how to prepare SSB for delivery to a customer.



2. Preparing syslog-ng Store Box for delivery

To prepare the syslog-ng Store Box for delivery, complete the following steps:

Step 1. Install SSB on the server hardware. Complete the following steps:

Step a. Carefully unpack all server components from the packing cartons.

Step b. When installing a server for , install the QLogic iSCSI host bus adapter card into the server. For details on installing these cards, see the *X8SIE/X8SIE-F/X8SIE-LN4/X8SI6-F User's Manual*.

Step c. Upgrade the server BIOS and the IPMI firmware to the latest available version. See the following documents for details:

- The *Onboard BMC/IPMI User's Guide, Chapter 3*, available at [the BalaBit Hardware Documentation page](#).

Step d. Set the Supervisor BIOS password to *changeme*.

Step e. Install the syslog-ng Store Box firmware to the server. See *Appendix B, syslog-ng Store Box Software Installation Guide (p. 9)* for details.

Step f. Attach the labels received from BalaBit to the network interfaces on the back panel of the server. syslog-ng Store Box is equipped with a dedicated IPMI interface and four Gigabit Ethernet interfaces. Attach the labels in the following order:

Step i. Attach the *IPMI* label to the IPMI interface of the server.

Step ii. Attach the *EXT* label to the upper-left Ethernet interface of the server.

Step iii. Attach the *MGMT* label to the upper-right Ethernet interface of the server.

Step iv. Attach the *INT* label to the lower-left Ethernet interface of the server.

Step v. Attach the *HA* label to the lower-right Ethernet interface of the server.

Step g. Connect the *external* interface (labeled as *EXT*) to the network or directly to a computer, and verify that the Welcome Wizard is accessible from a web browser.



Warning

Do not complete the Welcome Wizard, only verify its accessibility.

Note that your computer must be in the `192.168.1.0/24` network to be able to access the Welcome Wizard. See [Chapter 3, The Welcome Wizard and the first login](#) in *The syslog-ng Store Box 3 LTS Administrator Guide* for details.

Step h. Set the password for the IPMI to *changeme*.

Step i. Attach the syslog-ng Store Box label received from BalaBit to the front panel of the server.

Step j. Return the server into the packing cartons.



Step 2.



Note

When shipping two SSB units in high-availability mode, complete the above steps for both units.

Step 3. Put the syslog-ng Store Box accessory kit received from BalaBit into the packing cartons. Verify that the kit contains the following:

- Delivery note
- syslog-ng Store Box License Agreement
- syslog-ng Store Box Certificate
- A printed version of the syslog-ng Store Box Hardware Installation guide (*Appendix A, syslog-ng Store Box Hardware Installation Guide (p. 5)*).

Step 4. Seal the packing cartons.

Appendix A. syslog-ng Store Box Hardware Installation Guide

This leaflet describes how to set up the syslog-ng Store Box (SSB) hardware. Refer to the following documents for step-by-step instructions:

- *syslog-ng Store Box SSB1000*: For details on installing SSB into a rack, see the *SC811 CHASSIS Series User's Manual, Chapter 6: Rack Installation*. For details on connecting the cables to SSB see the *X8SIE/X8SIE-F/X8SIE-LN4/X8SI6-F User's Manual, Section 2-5 Connectors/IO Ports*.
- *syslog-ng Store Box SSB1000d and SAN Connect*: For details on installing SSB into a rack, see the *SC825M CHASSIS Series User's Manual, Chapter 5: Rack Installation*. For details on connecting the cables to SSB see the *X8DT3/X8DTi/X8DT3-F/X8DTi-F/X8DT3-LN4F/X8DTi-LN4F User's Manual, Section 2-5 Control Panel Connectors/IO Ports*.
- *syslog-ng Store Box SSB5000, and SSB10000* : For details on installing SSB into a rack, see the *SC826 CHASSIS Series User's Manual, Chapter 6: Rack Installation*. For details on connecting the cables to SSB see the *X8DT3/X8DTi/X8DT3-F/X8DTi-F/X8DT3-LN4F/X8DTi-LN4F User's Manual, Section 2-5 Control Panel Connectors/IO Ports*.

The manuals are available online at [the BalaBit Documentation page](#).

- For details on how to install a single SSB unit, see *Procedure A.1, Installing the SSB hardware (p. 5)*.
- For details on how to install a two SSB units in high availability mode, see *Procedure A.2, Installing two SSB units in HA mode (p. 7)*.
- If you have an external storage module, and you have purchased the SSB SAN Connect edition, see *Procedure A.3, Installing a SAN storage module to SSB (p. 7)*.

A.1. Procedure – Installing the SSB hardware

Purpose:

To install a single SSB unit, complete the following steps.

**Steps:**

Step 1. Unpack SSB.

Step 2. *Optional step:* Install SSB into a rack with the slide rails. Slide rails are available for all SSB appliances.

Step 3. Connect the cables.

Step a. Connect the Ethernet cable facing your LAN to the Ethernet connector labeled as *EXT*. This is the external interface of SSB and is used to configure SSB. (For details on the roles of the different interfaces, see [Section 2.5, Network interfaces](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.)

Step b. Connect an Ethernet cable that you can use to remotely support the SSB hardware to the *IPMI* interface of SSB. For details, see the following documents:

- The *Onboard BMC/IPMI User's Guide*, available at [the BalaBit Hardware Documentation page](#).

**Warning**

Connect the IPMI before plugging in the power chord. Failing to do so will result in IPMI failure.

It is not necessary for the IPMI interface to be accessible from the Internet, but the administrator of SSB must be able to access it for support and troubleshooting purposes in case vendor support is needed.

**Warning**

Access to information available only via the IPMI interface is a not mandatory, but highly recommended to speed up the support and troubleshooting processes.

Step c. *Optional step:* Connect the Ethernet cable to be used for managing SSB after its initial configuration to the Ethernet connector labeled as *MGMT*. This is the management interface of SSB. (For details on the roles of the different interfaces, see [Section 2.5, Network interfaces](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.)

Step d. *Optional step:* Connect the Ethernet cable connecting SSB to another SSB node to the Ethernet connector labeled as *HA*. This is the high availability (HA) interface of SSB. (For details on the roles of the different interfaces, see [Section 2.5, Network interfaces](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.)

Step 4. Power on the hardware.

Step 5. Change the BIOS and IPMI passwords on the syslog-ng Store Box. The default password is *changeme*.

Step 6. Connect to the SSB web interface from a client machine and complete the Welcome Wizard. This might require you to configure an alias interface on the client machine. Step 5 is described in detail in [Chapter 3, The Welcome Wizard and the first login](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.

**Note**

The syslog-ng Store Box Administrator Guide is available on the SSB on the [BalaBit Documentation page](#).

A.2. Procedure – Installing two SSB units in HA mode

Purpose:

To install SSB with high availability support, complete the following steps.

Steps:

- Step 1. For the first SSB unit, complete *Procedure A.1, Installing the SSB hardware (p. 5)*.
- Step 2. For the second SSB unit, complete Steps 1-2 of *Procedure A.1, Installing the SSB hardware (p. 5)*.
- Step 3. Connect the two units with an Ethernet cable via the Ethernet connectors labeled as **HA**.
- Step 4. Power on the second unit.
- Step 5. Connect to the SSB web interface of the first unit from a client machine and enable the high availability mode. Navigate to **Basic Settings > High Availability** . Click **Convert to Cluster**, then reload the page in your browser.
- Step 6. Reboot the slave unit, then reboot the master unit. Wait a few minutes until the master unit boots, then reload the page in your browser.
- Step 7. Wait until the slave unit synchronizes its disk to the master unit. Depending on the size of the hard disks, this may take several hours. You can increase the speed of the synchronization via the SSB web interface at **Basic Settings > High Availability > DRBD sync rate limit**.

A.3. Procedure – Installing a SAN storage module to SSB

Purpose:

If you have an external storage module, and you have purchased the SSB SAN Connect edition, complete the following steps.

Steps:

- Step 1. Install the SSB unit(s) as described in *Procedure A.1, Installing the SSB hardware (p. 5)*. If you have purchased two units for high availability, complete *Procedure A.2, Installing two SSB units in HA mode (p. 7)*.
- Step 2. Connect iSCSI port of SSB to the storage module with a crosslink cable.

**Warning**

If you have two SSB SAN Connect units in high availability mode, and your storage module has multiple iSCSI controllers, connect both units to the same controller, otherwise the second SSB unit might not be able to access the storage module after a failover.

- Step 3. Power on the storage module hardware.



Step 4. Configure the storage module to accept connections from SSB. Refer the manual of your storage module for details.



Warning

Ensure that the LUN numbers assigned to the volume mappings of the storage are between 1 and 30 (including 1 and 30). Do NOT use the 0 or the 31 LUN, because SSB will not be able to access the volumes.

Step 5. Power on the SSB hardware.

Step 6. Configure SSB to access the storage module. For details, see *Procedure 3.3, Configuring storage access in SSB* in *The syslog-ng Store Box 3 LTS Administrator Guide* and *Section 6.11, Managing SAN access in SSB* in *The syslog-ng Store Box 3 LTS Administrator Guide*.

For details on SAN troubleshooting, see *Procedure 14.8, SAN troubleshooting* in *The syslog-ng Store Box 3 LTS Administrator Guide*.

A.4. Hardware Troubleshooting

Refer to the *Setup Troubleshooting* chapter of the respective guide if you encounter any problems. If you still experience problems, contact the BalaBit Support Team via phone or e-mail:

To access the BalaBit Online Support System (BOSS), sign up for an account at [the MyBalaBit page](#) and [request access to the BalaBit Online Support System \(BOSS\)](#). Online support is available 24 hours a day.

BOSS is available only for registered users with a valid support package.

Support e-mail address: <support@balabit.com>.

Support hotline: +36 1 398 6700 (available from 9 AM to 5 PM CET on weekdays)

A.5. Hardware specifications

SSB appliances are built on high performance, energy efficient, and reliable hardware that are easily mounted into standard rack mounts.

Product	Unit	Redundant Power Supply	Processor	Memory	Capacity	RAID	IPMI
SSB1000	1	No	INTEL X3430 2,4GHz QUAD	4 GB RAM	2x 1 TB SATA	Software raid	Yes
SSB1000d	2	Yes	2x INTEL XEON E5620 2,4GHz	6x DDR3 4GB	2x 1 TB SATA	Software raid	Yes
SSB5000	2	Yes	2x INTEL XEON E5620 2,4GHz	6x DDR3 4GB	12x 500 GB SATA	ADAPTEC 5405 SAS RAID Controller	Yes



Product	Unit	Redundant Power Supply	Processor	Memory	Capacity	RAID	IPMI
SSB10000	2	Yes	2x INTEL XEON E5620 2,4GHz	6x DDR3 4GB	12x 1 TB SATA	ADAPTEC 5405 SAS RAID Controller	Yes

Table A.1. System related traps

Appendix B. syslog-ng Store Box Software Installation Guide

This leaflet describes how to install the syslog-ng Store Box (SSB) software on a certified hardware. The list of certified hardware is available at BalaBit.

B.1. Procedure – Installing the SSB software

Purpose:

To install a new SSB on a server, complete the following steps:

Steps:

- Step 1. Login to your [MyBalaBit account](#) and download the latest syslog-ng Store Box installation ISO file. Note that you need to have partner access to download syslog-ng Store Box ISO files. If you are a partner but do not see the ISO files, you can request partner access within MyBalaBit.
- Step 2. Mount the ISO image, or burn it to a CD-ROM.
- Step 3. Connect your computer to the *IPMI* interface of SSB. For details, see the following documents:
 - The *Onboard BMC/IPMI User's Guide*, available at [the BalaBit Hardware Documentation page](#).
- Step 4. Power on the server.
- Step 5. Login to the IPMI web interface, and boot the syslog-ng Store Box installation CD on the server using a virtual CD-ROM. For details, see the following documents:
 - The *Onboard BMC/IPMI User's Guide*, available at [the BalaBit Hardware Documentation page](#).
- Step 6. When the syslog-ng Store Box installer starts, select **Installer**, press Enter, and wait until the server finishes the boot process.
- Step 7. Select **Install a new SSB** and press **Enter** to start the installation process. Depending on the size of the disks, the installation process takes from a few minutes to an hour to complete. The progress of the installation is indicated in the **Installation Steps** window.
- Step 8. The installer displays the following question: **Warning, all data on the hard drive(s) will be erased. Are you sure?** Select **Yes** and press **Enter**.
- Step 9. The installer displays the MAC addresses of the network interfaces found in the SSB unit. Record these addresses.



- Step 10. If you are installing an SSB SAN Connect edition, the device includes an iSCSI HBA card. The installer will display the IQN number of the card during the installation. Record this number as it will be needed during the installation of the storage module.
- Step 11. The installer displays the product name, name of the SSB configuration that was installed, for example, *SSB1000*. If the product name displayed does not match the product you wanted to install, complete the following steps:
- Step a. Check that the hardware configuration of the appliance matches the specifications provided by BalaBit.
 - Step b. If the configuration matches the specifications but the installer displays a different product name, contact the BalaBit Support Team.
- Step 12. During the **Finishing the Setup** step, the installer performs RAID synchronization.
- Select **Yes** to perform the RAID synchronization. RAID synchronization is a two-step process, the progress of the active step is indicated on the progress bar. Wait until both steps are completed. Note that this synchronization takes several hours (about 8 hours on the average).
 - Select **No** to skip the RAID synchronization. Note that the system will automatically perform the synchronization after the first boot, but in this case the process will take several days.
- Step 13. After the installation is finished, press Enter to return to the main menu.
- Step 14. Select **Reboot** and press Enter to restart the system. Wait until the system reboots.
- Step 15. Connect your computer to the *EXT* interface of SSB. Create an alias IP address for your computer that falls into the *192.168.1.0/24* subnet (for example *192.168.1.10*). For details, see [Section 3.1, The initial connection to SSB](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.
- Step 16. Open the <http://192.168.1.1> URL in your web browser and verify that the Welcome Wizard of the syslog-ng Store Box is available.

**Note**

For details on the supported web browsers and operating systems, see [Section 4.1, Supported web browsers and operating systems](#) in *The syslog-ng Store Box 3 LTS Administrator Guide*.

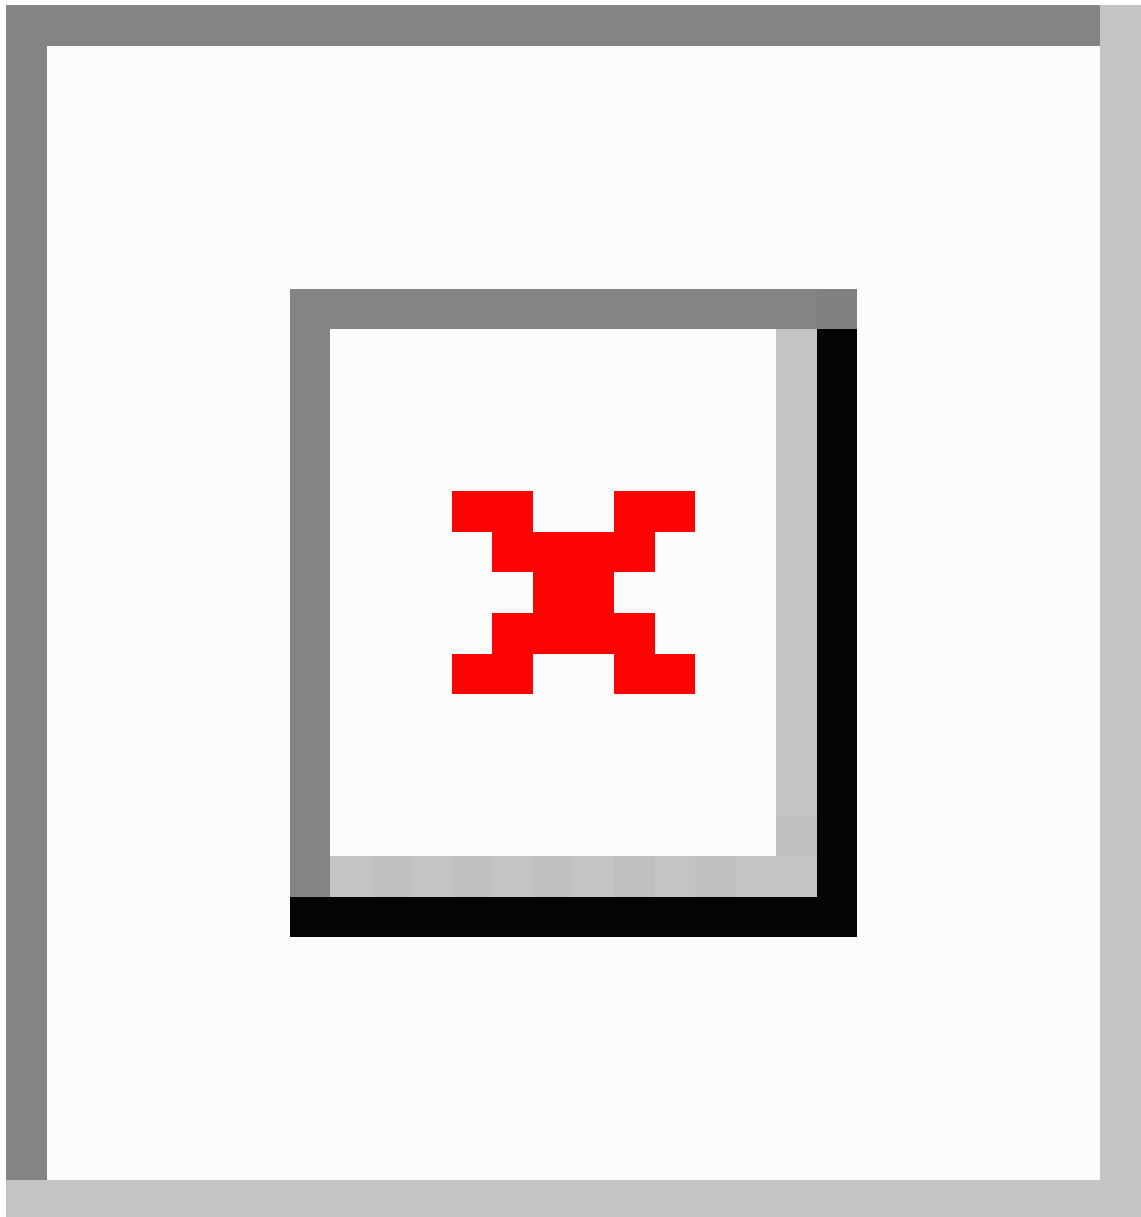


Figure B.1. The Welcome Wizard

Step 17. Power off the system.